


1. In all cases truss shall be supported at lower juncture connection.
2. Post to truss connections shall be fitted in shop.

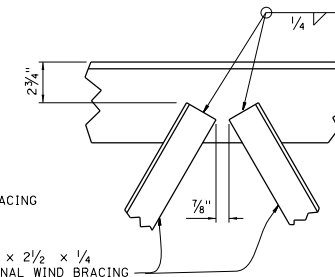

DETAIL C

NO SCALE

1-29-18